



## Loft Bed Safety Warning

- \* Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove the warning label from bed.
- \* Always use the recommended size mattress, mattress support or both to help prevent the likelihood of entrapment or falls.
- \* Surface of mattress must be at least 5 inches (127mm) below the upper edge of guardrails.
- \* Do not allow children under 6 years of age to use the upper bunk.
- \* Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- \* Do not allow horseplay on or under bed and prohibit jumping on the bed.
- \* Always use the ladder for entering and leaving the upper bunk.
- \* Do not use substitute parts/replacement parts. Contact BombayKIDS for replacement parts at 1-800 829-7789.
- \* Use of a nightlight may provide added safety precaution for a child using the upper bunk.
- \* Always use guardrails on both long sides of the upper bunk. If the bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- \* The use of water or sleep flotation mattresses are prohibited.
- \* Keep these instructions for future reference.



### **WARNING/DANGER:**

CHOKING HAZARD/RISQUE DE SUFFOCATION

-Small parts/petite pièces.

Not for children under 3 yrs./Pas pour les enfants sous 3 ans.



**1888959**

**K-X-Metal Locker Loft Bed**

A.	Headboard & Footboard	2 pcs
B.	Left Lower Side Assembly	1 pc
C.	Right Lower Side Assembly	1 pc
D.	Front Side Rail	1 pc
E.	Back Side Rail	1 pc
F.	Mattress Base Grids	2 pcs
G.	Front Guard Rail	1 pc
H.	Back Guard Rail	1pc
I.	Front Stretcher	1 pc
J.	Back Upper Stretcher	1 pc
K.	Back Lower Stretcher	1 pc
L.	Long Desk Top	1 pc
M.	Short Desk Top	1 pc
N.	Ladder	1 pc
O.	Large Round Plastic Caps	4 pcs
P.	Small Round Plastic Caps	2 pcs
Q.	Rectangular Plastic Caps	2 pcs
R.	Allen Head Bolts (M6 x 65)	11 pcs
S.	Allen Head Bolts (M6 x 40)	20 pcs
T.	Allen Head Bolts (M6 x 32)	2 pcs
U.	Allen Head Bolts (M6 x 20)	18 pcs
V	Flat Washers	15 pcs
W.	Bending Washers	14 pcs
X.	Allen Head Threaded Tubes	2 pcs
Y.	Allen Head Wrench	2 pcs
Z.	Optional Allen Head Screwdriver Bit	1 pc




**1888959**

## **K-X-Metal Locker Loft Bed**


**Use only Bombay KIDS replacement parts. Call the following number to request the part, 1-800 829-7789.**

- \* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- \* This item is to be assembled by an adult and is not intended to be taken apart by a child.


### **Hardware Illustrations**




**O. Large Round Plastic Cap**




**P. Small Round Plastic Cap**




**Q. rectangular Plastic Cap**

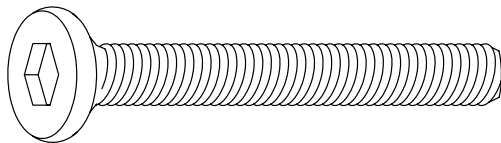


**R. Allen Head Bolt (M6x65)**

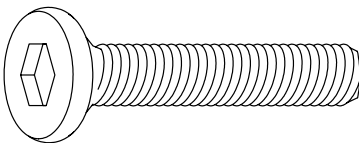


**S. Allen Head Bolt (M6x40)**

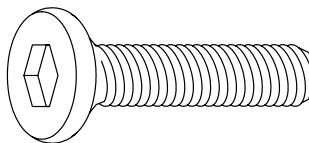


**T. Allen Head Bolt (M6x40)**

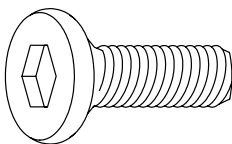


**U. Allen Head Bolt (M6x20)**



**V. Flat Washer**



**W. Bending Washer**

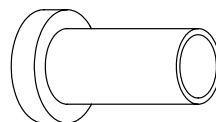

**X. Allen Head Threaded Tube**



**1888959**

## K-X-Metal Locker Loft Bed

### Attach Side Rails & Mattress Base Grids

#### Parts required

A.	Headboard & Footboard	2 pcs	S.	Allen Head Bolts (M6 x 40)	8 pcs
D.	Front Side Rail	1 pc	V.	Flat Washers	8 pcs
E.	Back Side Rail	1 pc	Y.	Allen Head Wrench	1 pc
F.	Mattress Base Grids	2 pcs	Z.	Allen Head Screwdriver Bit	1 pc

- 1 **Attach Front & Back Side Rails (D, E)** Insert the exposed hooks of Front & Back Side Rails (D, E) into the slots of the Headboard & Footboard (A) and press down firmly. See illustration #1.
- 2 **Attach Mattress Base Grids (F)** Align the pre-drilled holes in the frame of Mattress Base Grids (F) with pre-drilled holes in the cleats of Front & Back Side Rails (D, E). Secure with Allen Head Bolts (M6 x 40) (S) and Flat Washers (V) using Allen Head Tool (Y or Z). See illustration #1.

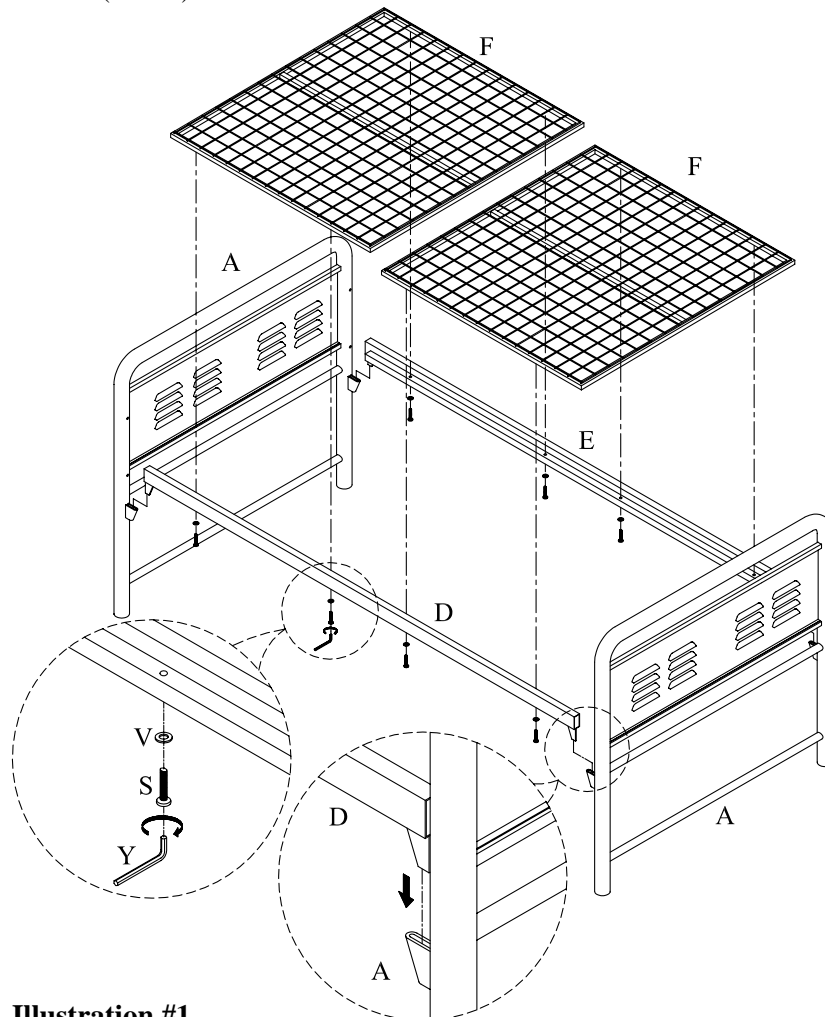


Illustration #1

### Attach Front & Back Guard Rails

#### Parts required



1888959

## K-X-Metal Locker Loft Bed

A.	Headboard & Footboard	2 pcs	R.	Allen Head Bolts (M6x65)	11 pcs
D.	Front Side Rail	1 pc	V.	Flat Washers	5 pcs
E.	Back Side Rail	1 pc	W.	Bending Washers	6 pcs
G.	Front Guard Rail	1 pc	Y.	Allen Head Wrench	1 pc
H.	Back Guard Rail	1 pc	Z.	Allen Head Screwdriver Bit	1 pc

3. **Attach Front & Back Guard Rails (G, H)** Align the pre-threaded holes in the post ends of Front & Back Guard Rails (G, H) with the pre-drilled holes in the Front & Back Side Rails (D, E). **Note: Front Guard Rail (G) can be positioned with ladder opening on the left side or right side.** Secure, but do not fully tighten with Allen Head Bolts (M6x 65) (R) and Flat Washers (V) using Allen Head Tool (Y or Z). Adjust and align the pre-threaded holes in the left or right end of Front Guard Rail (G) & two ends of Back Guard Rail (H) with the pre-drilled holes in the posts of Headboard & Footboard (A). Insert the Allen Head Bolts (M6x65) (R) through Bending Washers (W) and the pre-drilled holes in the posts of Headboard & Footboard (A) into the pre-drilled holes in the ends of Front & Back Guard Rails (G, H). Tighten all bolts using Allen Head Tool (Y or Z) at this time. **If the bunk will be placed next to the wall, the guard rail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.** See illustration #2.

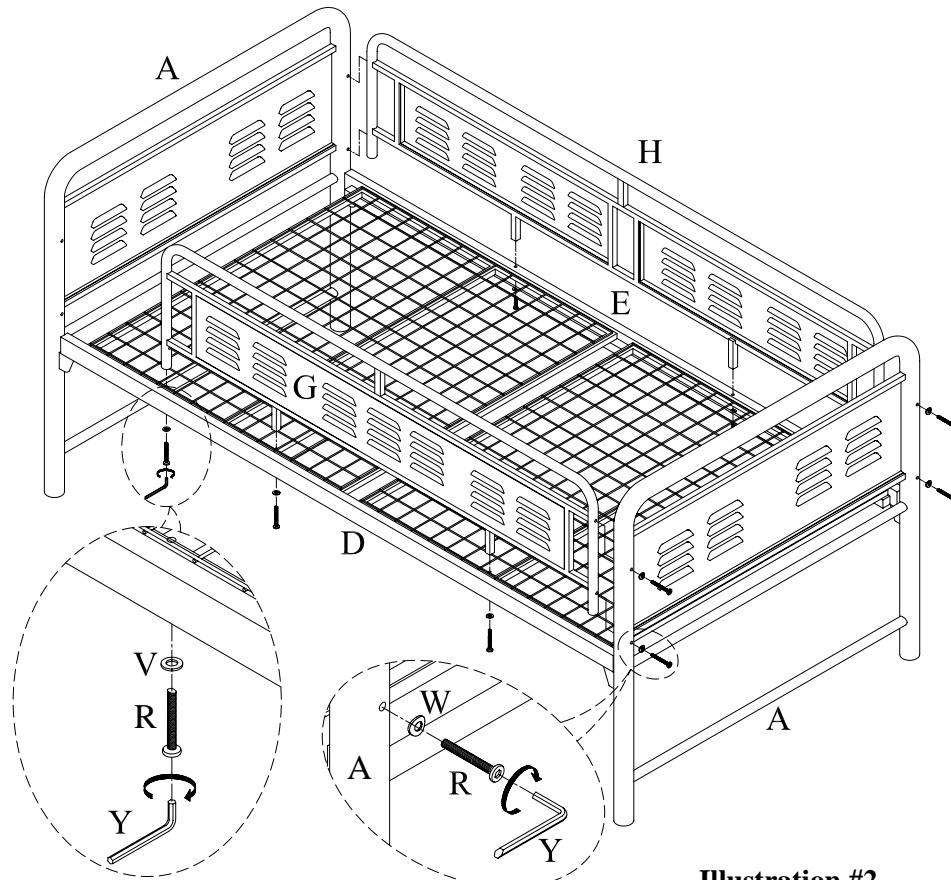


Illustration #2

### Attach Desk Top

### Parts required




1888959

## K-X-Metal Locker Loft Bed

B.	Left Lower Side Assembly	1 pc	S.	Allen Head Bolts (M6 x 40)	12 pcs
C.	Right Lower Side Assembly	1 pc	T.	Allen Head Bolts (M6 x 32)	2 pcs
I.	Front Stretcher	1 pc	U.	Allen Head Bolts (M6 x 20)	8 pcs
J.	Back Upper Stretcher	1 pc	X.	Allen Head Threaded Tubes	2 pcs
K.	Back Lower Stretcher	1 pc	Y.	Allen Head Wrench	2 pcs
L.	Long Desk Top	1 pc	Z.	Optional Allen Head Screwdriver Bit	1 pc
M.	Short Desk Top	1 pc			

- 4. Attach Back Upper & Lower Stretchers (J, K)** Align the pre-drilled holes in the brackets of the Back Upper & Lower Stretchers (J, K) with the pre-threaded holes in the back posts of Left & Right Lower Side Assemblies (B, C). Secure, but do not tighten with Allen Head Bolts (M6x 20) (U) using Allen Head Tool (Y or Z). See illustration #3. **Make sure the ends of stretchers labeled “Left” and “Right” are in the correct position.**
- 5. Attach Front Stretcher (I)** Align the pre-threaded holes in the ends of the Front Stretcher (I) with the pre-drilled holes in the top rails of Left & Right Lower Side Assemblies (B, C). Insert the Allen Head Bolts (M6x40) (S) through the pre-drilled holes and into the pre-threaded holes in the ends of the Front Stretcher (I). Tighten all bolts with Allen Head Tool (Y or Z). See illustration #3.
- 6. Attach Long & Short Desk Tops (L, M)** **Place the Long & Short Desk Tops (L, M) on the Left & Right Lower Side Assemblies (B, C). Next,** align the pre-drilled holes in the ends of Long Desk Top (L) with the pre-drilled holes in the ends of Short Desk Top (M). Secure with Allen Head Bolts (M6 x 32) (T) and Allen Head Threaded Tubes (X) using Allen Head Tool (Y or Z). Align the pre-threaded holes in the bottom of Long & Short Desk Tops (L or M) with pre-drilled holes in the Front & Back Upper Stretchers (I, J), top rails of Left & Right Side Assemblies (B, C). Secure with Allen Head Bolts (M6x40) (S) using Allen Head Tool (Y or Z). See illustration #3. **NOTE: The underside of the desktop has two sets of pre-drilled holes in two different spots to accommodate our Bombay KIDS Keyboard Tray (Item# 1870941 - Black or Item# 1870970 - White). One position is in the center under the desktop and the other position is in the corner under the desktop.**

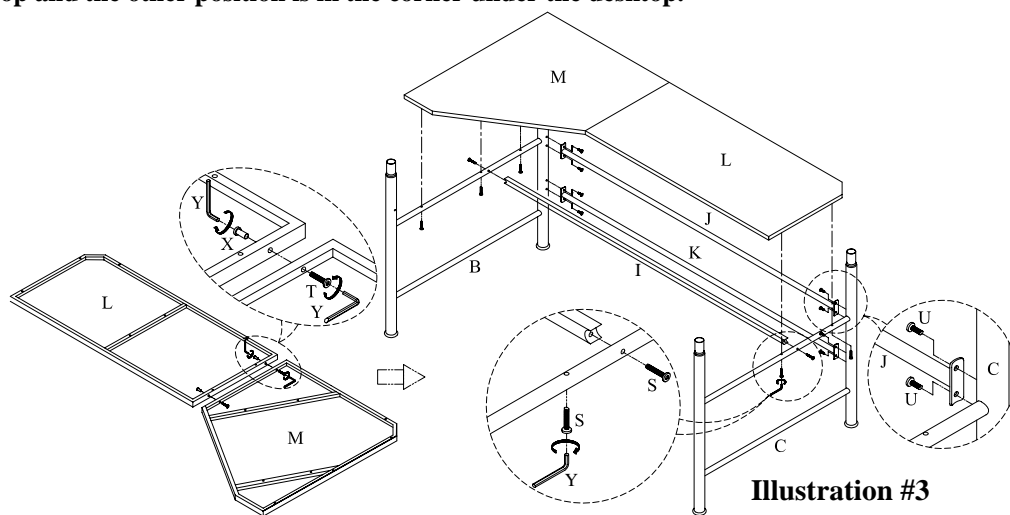

**Note: Desktop can hold up to a 20" TV or 20" monitor only.**

**Attach Upper Bed to Lower Side Assemblies**

**Attach Ladder**




**1888959**

## **K-X-Metal Locker Loft Bed**

### **Parts required**

A.	Headboard & Footboard	2 pcs	P.	Small Round Plastic Caps	2 pcs
B.	Left Lower Side Assembly	1 pc	Q.	Rectangular Plastic Caps	2 pcs
C.	Right Lower Side Assembly	1 pc	U.	Allen Head Bolts (M6 x 20)	10 pcs
D.	Front Side Rail	1 pc	V.	Flat Washers	2 pcs
G.	Front Guard Rail	1 pc	W.	Bending Washers	8 pcs
N.	Ladder	1 pc	Y.	Allen Head Wrench	1 pc
O.	Large Round Plastic Caps	4 pcs	Z.	Optional Allen Head Screwdriver Bit	1 pc

9. **Attach Upper Bed to Left & Right Lower Side Assemblies (B, C)** Lift the upper bed and insert the post ends of Left & Right Side Assemblies (B, C) into the bottom ends of upper bed so that the pre-drilled holes in the posts of upper bed align with the pre-drilled holes in the posts of Left & Right Side Assemblies (B, C). Secure with Allen Head Bolts (M6x20) (U) and Bending Washers (W) using Allen Head Tool (Y or Z). See illustration #4.
10. **Attach Ladder (N)** Hook the Ladder (N) on the left or right opening of Front Side Rail (D). Adjust and align the pre-drilled holes in the hooks with the pre-threaded holes in the back of Front Side Rail (D). Secure with Allen Head Bolts (M6x20) (U) and Flat Washers (V) using Allen Head Tool (Y or Z). Cover the holes in the front post of Headboard & Footboard (A), Front Guard Rails (G) and Front Side Rail (D) using Large Round Plastic Caps (O), Small Round Plastic Caps (P) and Rectangular Plastic Caps (Q). See illustration #4.

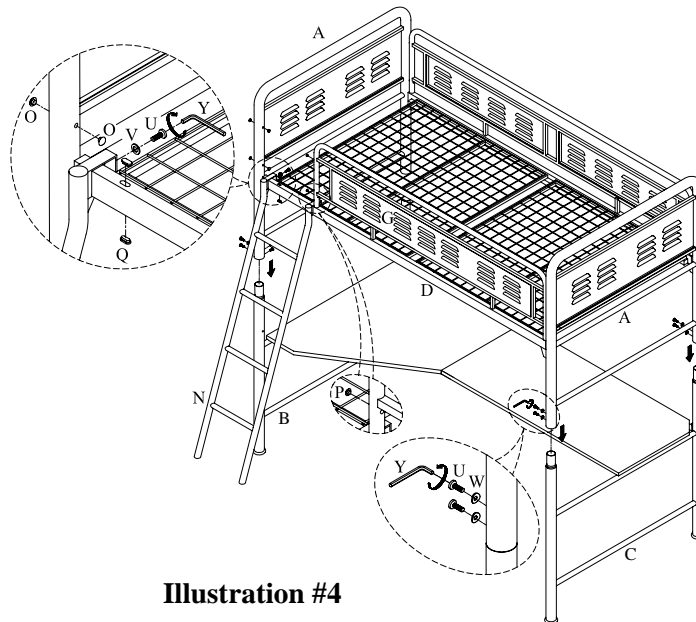

**Illustration #4**

Use only a mattress that is 75 inches long and 38-1/2 inches wide on the bunk beds. Ensure the thickness of mattress and foundation combined does not exceed 7 inches and the mattress surface is at least 5 inches below upper edge of guardrails.